

Ouick Start Instructions

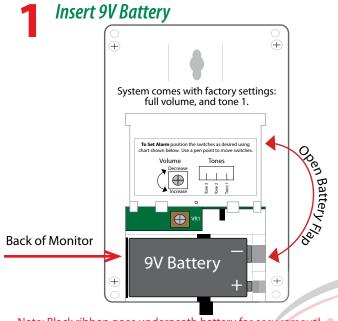


Note: Black ribbon goes underneath battery for easy removal.

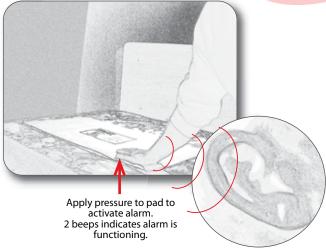




Alarm will sound when pressure is released from pad.
Slide switch on side of monitor to "off" to silence alarm.
Slide switch on side of monitor to "on" to re-activate alarm.

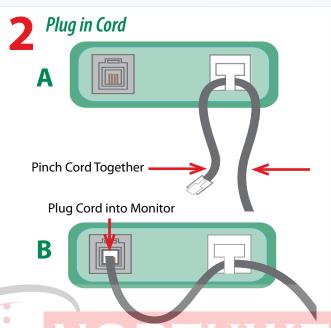

Note: Breakaway cords will not fit into strain relief.

Adjust Settings (Optional)

System comes with factory settings: full volume, and tone 1. Use a small flathead screwdriver to adjust volume.

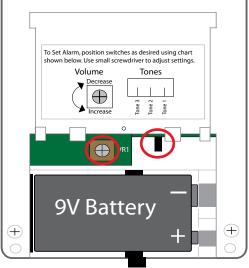


Attach Monitor



Note: Other mounting options available. Call 800-650-3637

6 How to Silence an Alarming Monitor

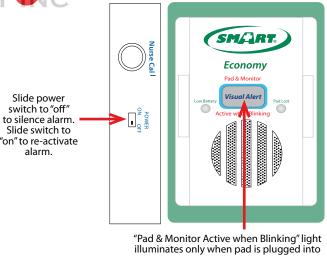

monitor and pressure is on pad.

Note: TamperProof™ Monitor with Reset Button Available. Call 800-650-3637

Toll Free: 800-650-3637 sales@smartcaregivercorp.com



This product is to be used by a licensed caregiver only. This device is to help augment caregiver's comprehensive resident mobility management program. WARNING: The manufacturer does not claim that this device will stop elopement and or stop falls.

LIABILITY FOR COMPENSATORY OR OTHER DAMAGES ARISING OUT OF THE USE OF THE GOODS. ECONOMIC DAMAGES TO REFUND OF THE PURCHASE PRICE OR REPLACEMENT OF THE GOODS. SELLER DISCLAIMS ANY WHERE PERMISSIBLE, IT IS THE SELLER'S INTENT TO LIMIT ANY LIABILITY FOR SPECIAL, CONSEQUENTIAL OR INCIDENTAL

c.) Testing of the system before each use.

b.) Adequate training for staff personnel for elopement a.) Direct patient supervision

designed to replace good care giving practices including, but not limited to:

entire responsibility of the buyer to insure that the system is properly installed and tested. Further, the system is not The Smart Caregiver Corporation® FallGuard™ monitors are designed to be installed by the end-user. As such, it is the RETAILER, ASSUMES THE ENTIRE COST OF ALL NECESSARY INSTALLATION, SERVICING OR REPAIRS. GOODS PROVE DEFECTIVE FOLLOWING THEIR PURCHASE, THE BUYER, AND NOT THE MANUFACTURER, DISTRIBUTOR OR

BASIS. THE ENTIRE RISK AS TO THE QUALITY AND PERFORMANCE OF THE GOODS IS WITH THE BUYER. SHOULD THE OR ACTION, WILL CONSTITUTE A WARRANTY. THE GOODS BEING PURCHASED ARE BEING SOLD ON A "WITH ALL FAULTS" this limited warranty, NO EXPRESS OR IMPLIED WARRANTIES ARE GIVEN AND NO AFFIRMATION OF SELLER, BY WORDS year from the date of sale. Other than this limited warranty, seller makes no express or implied warranties. Except for Seller warrants that the goods sold will be free from defects of workmanship and manufacturing, for a period of one

ident mobility management program. Test this device before each use. Read the instructions and Legal Disclaimer. claim that this device will stop elopement and or stop falls. This device is to help augment caregiver's comprehensive resdevices may be required. This device is not a substitute for visual monitoring by caregiver. The manufacturer does not Warning: Failure to comply with warning may result in injury or death. This device is not suitable for all individuals. Other has expired. Pads will still function normally. Call (800) 650-3637 for more information.

Caution: If using this monitor with Change Pad Indicator[™] Timed Pressure Pads, monitor will not indicate when pad life

Alarm will make a chirping noise when battery is low.

TL-2100E FallGuard™ Economy System

Installation Instructions

TL-2100E FallGuard™ Economy Monitor





7£8£-028 (008) fqlaH qu-ta2 baaM

light does not function when using the floor mat. side of monitor to "on" to re-activate alarm. Status monitor to "off" to silence alarm. Slide switch on

- When the alarm is activated, Slide switch on side of on the Floor Mat. is now active. Alarm will sound anytime weight is
- Step on Floor Mat to set off the alarm. The monitor

TEST SYSTEM

tamper with monitor.

- wall, or under the bed so the resident cannot mounting locations include back of headboard,
- Place monitor out of reach of resident. Suitable doorway or next to a bed.
- Place Floor Mat in desired location such as a critical
 - FLOOR MAT PLACEMENT

Floor Mat

light on front of monitor will blink when the seat belt is plugged into the monitor alarm. Slide switch on side of monitor to "on" to re-activate alarm. The status • When the alarm is activated, slide switch on side of monitor to "off" to silence

Alarm will sound whenever Seat Belt is unbuckled. Buckle and Unbuckle the Seat Belt to set off the alarm. The monitor is now active.

TEST SYSTEM of wheelchair so that the resident cannot tamper with monitor.

- Place monitor out of reach of the resident. Suitable mounting location is the back adjustment strap in place.
 - Adjust Seat Belt to desired length using the black buckle that holds the seat belt in place. Make sure the screws are tightened.
- the screw holes. Re-insert screws through both seat belt and wheelchair to hold Attach seat belt to wheelchair by lining up the grommet holes on seat belt with
- Unscrew one screw on either side of wheelchair that holds seat in place.



Seat Belt

and pressure is on pad. the front of monitor will blink when pad is plugged into monitor side of monitor to "on" to re-activate alarm. The status light on switch on side of monitor to "off" to silence alarm. Slide switch on Alarm will sound when pressure is released from pad. Slide

- alarm. Monitor will beep twice when active. · Plug pad into monitor and apply pressure to pad to activate

sheet so the resident cannot tamper with it). (It is the caregiver's responsibility to route the cord under the under bed. Make sure the resident cannot tamper with monitor locations include: back of headboard, back of wheelchair, wall or

- Place monitor out of reach of resident. Suitable mounting
 - Center pad under buttocks.
 - WHEELCHAIR/CHAIR PLACEMENT

Wheelchair Pressure Pads

and pressure is on pad.

monitor will blink when pad is plugged into monitor to re-activate alarm. The status light on the front of silence alarm. Slide switch on side of monitor to "on" pad. Slide switch on side of monitor to "off" to

- Alarm will sound when pressure is released, from activate alarm. Monitor will beep twice when active.
- Plug pad into monitor and apply pressure to pad to

TEST SYSTEM

- alerted when resident vacates the bed.
- Place pad under lower back/buttocks to be resident sits up in bed.
- Place pad under shoulders to be alerted when
 - Place pad under sheet.

BED PLACEMENT

Bed Pressure Pads



